

3 CH MODE	Popis	Rozsah	Detail
1	RED	0→255	Red 0→100%
2	GREEN	0→255	Green 0→100%
3	BLUE	0→255	Blue 0→100%

4 CH MODE	Popis	Rozsah	Detail
1	STROBE	0→255	Strobe Slow To Fast 0→100%
2	RED	0→255	Red 0→100%
3	GREEN	0→255	Green 0→100%
4	BLUE	0→255	Blue 0→100%

7 CH MODE	Popis	Rozsah	Detail
1	DIMMER	0→255	Dimmer 0→100%
2	STROBE	0→255	Strobe Slow To Fast 0→100%
3	MACRO	0→50	
		51→100	Colors Change
		101→150	Colors Fade In
		151→200	Colors Fade In Out
		200→255	RED
4	SPEED	0→255	Slow To Fast 0→100%
5	RED	0→255	Red 0→100%
6	GREEN	0→255	Green 0→100%
7	BLUE	0→255	Blue 0→100%