

WW/CW 2in1 COB LED Par Light

DMX MODE

2 Channels Mode

Channel	Function	Instruction
CH1	WW Dimmer	Warm White Dimmer- Dark to Bright
CH2	CW Dimmer	Cold White Dimmer- Dark to Bright

 
4 Channels Mode

Channel	Function	Instruction
CH1	Total Dimmer	Dark to Bright
CH2	WW Dimmer	Warm White Dimmer- Dark to Bright
CH3	CW Dimmer	Cold White Dimmer- Dark to Bright
CH4	Total Strobe	Strobe- Slow to Fast

6 Channels Mode

Channel	Function	Instruction
CH1	Total Dimmer	Dark to Bright
CH2	WW Dimmer	Warm White Dimmer- Dark to Bright
CH3	CW Dimmer	Cold White Dimmer- Dark to Bright
CH4	Total Strobe	Strobe- Slow to Fast
CH5	Function Choice	000~050: CH1-CH5Control. 051~100: color temperature,Set by channel 6. 101~150: Colors Jump Change. 151~200: Colors Gradate. 201~250: Colors Pulse Change. 251~255: Sound-Active
CH6	Function/Speed	Slow to Fast (At the Colors output choose the color)

KEYS INSTRUCTION



DIGITAL SHOW FUNCTION FORM

No	Show	Function	Value	Instruction
1	H001	DMX address	001~512	6CH mode
2	A001	DMX address	001~512	4CH mode
3	d001	DMX address	001~512	2CH mode
4	CL01	Colors set	01~03	UP,DOWN Change
5	CC15	Colors Jump	00 ~ 15	UP,DOWN change the speed
6	DE15	Colors Gradate	00 ~ 15	UP,DOWN change the speed
7	CP15	Colors Pulse	00 ~ 15	UP,DOWN change the speed
8	U255	WW dimmer	000~255	UP,DOWN Change brightness
9	C255	CW dimmer	000~255	UP,DOWN Change brightness
10	F255	Strobe	010 ~ 255	UP,DOWN change the speed
11	SoUd	Colors	/	Sound-Active