

LED RGBWA Par Light

DMX MODE

5 Channels Mode (d001)

Channel	Function	Instruction
CH1	R Dimmer	Dimmer- Dark to Bright
CH2	G Dimmer	Dimmer- Dark to Bright
CH3	B Dimmer	Dimmer- Dark to Bright
CH4	W Dimmer	Dimmer- Dark to Bright
CH5	A Dimmer	Amber- Dark to Bright

9 Channels Mode (A001)

Channel	Function	Instruction
CH1	Total Dimmer	RGBWA Total Dimmer- Dark to Bright
CH2	R Dimmer	Red Dimmer- Dark to Bright
CH3	G Dimmer	Green Dimmer- Dark to Bright
CH4	B Dimmer	Blue Dimmer- Dark to Bright
CH5	W Dimmer	White Dimmer- Dark to Bright
CH6	A Dimmer	Amber- Dark to Bright
CH7	Total Strobe	RGBWA Total Flash Strobe, 005-255 Slow to Fast
CH8	Function Choice	000~050: CH1-CH7 Control. 051~100: Different Colors output 101~150: Colors Jump Change. 151~200: Colors Gradate. 201~250: Colors Pulse Change. 251~255: Sound-Active
CH9	Function/Speed	Slow to Fast (At the Colors output choose the color)

KEYS INSTRUCTION



DIGITAL SHOW FUNCTION FORM

No	Show	Function	Value	Instruction
1	d001	DMX address	001~512	5CH mode UP,DOWN increase or reduce the value
2	A001	DMX address	001~512	9CH mode UP/DOWN increase or reduce the value

3	S-SL	Dim speed	SL/FA	DMX512 Dimming speed set: SL:Slow dimming; FA:Fast dimming.
4	d-Ho	Signal lost setting	Ho/oF	DMX512 Signal loss processing mode: Ho: Hold the final DMX signal state; oF: Close all LEDs
5	rFye	Remote control	ye/no	Ye: RF enable; no:RF disable
6	r255	Red dim	000~255	UP,DOWN Change brightness
7	G255	Green dim	000~255	UP,DOWN Change brightness
8	b255	Blue dim	000~255	UP,DOWN Change brightness
9	u255	White dim	000~255	UP,DOWN Change brightness
10	Y255	Amber dim	000~255	UP,DOWN Change brightness
11	F255	Strobe	010 ~ 255	UP,DOWN change the speed
12	CC15	Colors Jump	00 ~ 15	UP,DOWN change the speed
13	DE15	Colors Gradate	00 ~ 15	UP,DOWN change the speed
14	CP15	Colors Pulse	00 ~ 15	UP,DOWN change the speed
15	SoUd	sound-Active	/	Sound-Active
16	t 30	Temperature display	00-99	Current temperature display.