

# 1、 18 six section 4-in-1 wall washing lamps

## DMX channel menu

### AH80 DH281

#### 8-channel mode (A001 status)

channel	function	explain
CH1	Total dimming	Total dimming, from dark to bright
CH2	R dimming	Red dimming, from dark to bright
CH3	G dimming	Green dimming, from dark to bright
CH4	B dimming	Blue dimming, from dark to bright
CH5	W dimming	White dimming, from dark to bright
CH6	Total stroboscopic	Global stroboscopic, from slow to fast
CH6	Function selection	0: dimming mode;
		1 — 50: color selection (selected by ch8);
		51-76: single jump effect 1-single jump effect 26;
		77-100: jump all effects;
		101-126: single gradient effect 1-single gradient effect 26;
		127-150: gradient all effects;
		151-176: single pulse effect 1-single pulse effect 26;
		177-200 pulse change all effects;
		201-255: voice control (ch8 selects voice control 1 and 2)
CH8	Function speed	Function speed, from slow to fast (color selection for color output and voice control for stroboscopic and jump)

#### 28 channel mode (D001)

channel	function	explain
CH1	Total dimming	Total dimming, from dark to bright
CH2	Total stroboscopic	Global stroboscopic, from slow to fast
CH3	Function	0: dimming mode;



	selection	1 — 50: color selection (selected by CH4);
		51-76: single jump effect 1-single jump effect 26;
		77-100: jump all effects;
		101-126: single gradient effect 1-single gradient effect 26;
		127-150: gradient all effects;
		151-176: single pulse effect 1-single pulse effect 26;
		177-200 pulse change all effects;
		201-255: voice control (CH4 selects voice control 1 and 2)
CH4	Function speed	Function speed, from slow to fast (color selection for color output and voice control for stroboscopic and jump)
CH5	R1 dimming	Red 1 dimming, from dark to bright
CH6	R2 dimming	Red 2 dimming, from dark to bright
CH7	R3 dimming	Red 3 dimming, from dark to bright
CH8	R4 dimming	Red 4 dimming, from dark to bright
CH9	R5 dimming	Red 5 dimming, from dark to bright
CH10	R6 dimming	Red 6 dimming, from dark to bright
CH11	G1 dimming	Green 1 dimming, from dark to bright
CH12	G2 dimming	Green 2 dimming, from dark to light
CH13	G3 dimming	Green 3 dimming, from dark to bright
CH14	G4 dimming	Green 4 dimming, from dark to bright
CH15	G5 dimming	Green 5 dimming, from dark to bright
CH16	G6 dimming	Green 6 dimming, from dark to light
CH17	B1 dimming	Blue 1 dimming, from dark to bright
CH18	B2 dimming	Blue 2 dimming, from dark to bright
CH19	B3	Blue 3 dimming, from dark to bright



	dimming	
CH20	B4 dimming	Blue 4 dimming, from dark to bright
CH21	B5 dimming	Blue 5 dimming, from dark to bright
CH22	B6 dimming	Blue 6 dimming, from dark to bright
CH23	W1 dimming	White 1 dimming, from dark to bright
CH24	W2 dimming	White 2 dimming, from dark to bright
CH25	W3 dimming	White 3 dimming, from dark to bright
CH26	W4 dimming	White 4 dimming, from dark to bright
CH27	W5 dimming	White 5 dimming, from dark to bright
CH28	W6 dimming	White 6 dimming, from dark to bright

## 2、 Description of nixie tube display menu

Serial number	content	numerical value	Function and description
1	A001	001- 512	DMX512 address code setting -8-channel mode
2	d001	001- 512	DMX512 address code setting -28 channel mode
3	r255	000 - 255	Red dimming, from dark to bright.
4	G255	000 - 255	Green dimming, from dark to bright.
5	b255	000 - 255	Blue dimming, from dark to bright.
6	u255	000 - 255	White dimming, from dark to bright.
7	FH99	00 - 99	No stroboscopic at 00, global stroboscopic at 01-99, from slow to fast.
8	CL01	01 - 49	Manual color selection mode.

<b>9</b>	<b>CC99</b>	<b>01 - 99</b>	Jump from slow to fast.
<b>10</b>	<b>DE99</b>	<b>01 - 99</b>	Gradient, from slow to fast.
<b>11</b>	<b>CP99</b>	<b>01 - 99</b>	Pulse changes from slow to fast.
<b>12</b>	<b>Auto</b>		Automatic effects.
<b>13</b>	<b>SU01</b>	<b>01 - 02</b>	Mode: 1 refers to stroboscopic jump, 2 refers to jump

## 2、 Master slave description

In D001 or A001 status, the slave signal is automatically received without additional setting.