## 2 Eyes 200 W, C O B audience lights

## I. Channel description


4-Channel Mode (d001 mode)

| chan<br>nel | function | explain                                 |  |  |
|-------------|----------|---|--|--|
| CH1         | aiming   | True-white dimming, from dark to bright |  |  |
| CH2         | aiming   | Warm white dimming, from dark to bright |  |  |
| СНЗ         | aiming   | True-white dimming, from dark to bright |  |  |
| CH4         | aiming   | Warm white dimming, from dark to bright |  |  |

## 8-Channel Mode (A001 mode)

| chan<br>nel | function                     | explain  |  |  |  |
|-------------|------------------------------|--|--|--|--|
| CH1         | Total dimming                | Total dimming, from dark to bright   |  |  |  |
| CH2         | aiming                       | True-white dimming, from dark to bright  |  |  |  |
| СНЗ         | aiming                       | Warm white dimming, from dark to bright  |  |  |  |
| CH4         | aiming                       | True-white dimming, from dark to bright  |  |  |  |
| CH5         | aiming                       | Warm white dimming, from dark to bright  |  |  |  |
| СН6         | Total<br>frequenc<br>y flash | Total strobe, from slow to fast  |  |  |  |
| СН7         | FS                           | 0-50: CH1-CH6 control; 51100: common color output (8); 101-150: jump; 151-200: gradient; 201-250 pulse; 251-255: sound control |  |  |  |
| CH8         | Function al speed            | Function speed, from slow to fast, (color selection for color output)  |  |  |  |

two,.Diagram of key:

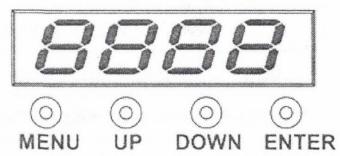

MENU: function key UP: Key DOWN: Subkey ENTER: confirm key

## 3. Display instructions

| orde | conten | scale     | Functions and instructions   |
|------|--------|-----------|--|
| 1    | A001   | 001512    | DMX512 Address Code Settings-8<br>Channel mode                                   |
| 2    | d001   | 001512    | DMX512 Address Code Settings-4-channel mode                                      |
| 3    | r255   | 000 - 255 | Normal white (1) dimming, from dark to bright.                                   |
| 4    | G255   | 000 - 255 | Warm white (2) dimming, from dark to bright.                                     |
| 5    | b 255  | 000 - 255 | Normal white (3) dimming, from dark to bright.                                   |
| 6    | u255   | 000 - 255 | Warm white (4) dimming, from dark to bright.                                     |
| 7    | F 255  | 000 - 255 | 5 Above the start of strobe, speed from slow to fast, through the RGBU selection |
| 8    | CC 15  | 00 - 15   | Jump and change, from slow to fast.  |
| 9    | DE 15  | 00 - 15   | Gradient change, from slow to fast.  |
| 10   | CP 15  | 00 - 15   | Pulchange, from slow to fast.  |
| 11   | S oud  | 1         | Sound control color change   |

Table (I) Function table of digital tube display window

IV. Background parameters

| orde | conten | scale     | Functions and instructions   |
|------|--------|-----------|--|
| 1    | 000    | 000       | Background menu  |
| 2    | r125   | 000255    | Positive white (1) Current value   |
| 3    | G230   | 000 - 255 | Warm white (2) Current value   |
| 4    | b 220  | 000 - 255 | Positive white (3) current value.  |
| 5    | u 220  | 000 - 255 | Warm white (4) Current value   |
| 6    | S u15  | 00 - 15   | Sound control sensitivity adjustment                                       |
| 7    | F t40  | 30 - 79   | The fan starts turning at a temperature                                    |
| 8    | Pt70   | 30 - 79   | Protect the temperature and start to reduce the power                      |
| 9    | P200   | 000-255   | The P-value, the reduced power value                                       |
| 10   | N ud1  | 1-3       | Channel selection channel 1 in the top 2 channel in the posterior, 3 speed |
| 11   | S-SL   | SL/FA     | Dimming speed selection, the default slow speed                            |
| 12   | d-oF   | oF/Ho     | Signal loss remains selected, and is not maintained by default             |
| 13   | dnof   | 0F/YE     | Automatic 512 switch, default off  |
| 14   | H541   | 1         | Program version number   |
| 15   | C_no   | N o/ye    | Current on line  |

Voltage: 110-220V

Light source: COB lamp beads

Color: white light, warm light / red, green, blue and white

Light power: 200W

Control mode: DMX512, sound control, self-go

Channel: 8

Applications: stage, wedding, hotel, bar

Light size: 15.5x23x38cm

Net weight: 3.5Kg

Hair weight: 4kg