

1 1-color DMX channel menu AH10 DH11

3-channel mode (A001 status)

Channel	Channel value	Function description
CH1	0-255	Total dimming
CH2	0	Red light off
	1-255	Red light linearly adjusts brightness (from dark to bright)
CH3	0	No stroboscopic
	1-255	Stroboscopic (from slow to fast), the higher the value, the faster the speed
CH4	0-255	Color selection / color change speed (the higher the value, the faster the speed) / voice control mode 1 mode 2 selection

3-channel mode (D001 status)

Channel	Channel value	Function description
CH1	0-255	Total dimming
CH2	0	No stroboscopic
	1-255	Stroboscopic (from slow to fast), the higher the value, the faster the speed
CH3	0-255	Color selection / color change speed (the higher the value, the faster the speed) / voice control mode 1 mode 2 selection
CH4	0	Red light off
	1-255	Red light linearly adjusts brightness (from dark to bright)

2 Nixie tube display menu description

Serial number	content	Numerical range	Function and description
1	A001	001- 512	DMX512 address code setting - 3-channel mode
2	d001	001- 512	DMX512 address code setting - 3-channel mode
3	r255	000 - 255	Red dimming, from dark to bright.
4	FH99	01 - 99	Stroboscopic, speed from slow to fast.
5	CL01	01	Manual color selection mode.
6	CC99	01 - 99	Jump from slow to fast.
7	DE99	01 - 99	Gradient from slow to fast.
8	CP99	01 - 99	Pulse changes from slow to fast.
9	SU01	01 - 02	Mode: 1 is stroboscopic jump, 2 is jump

3 Master slave description

In D001 or A001 state, the slave signal is automatically received without additional setting.