


# Two-color imaging lamp-spotlight instructions for use

The Company reserves the right to change the product design and specifications without prior notice

## The LCD display instructions are as follows

### 1. Graphic section:

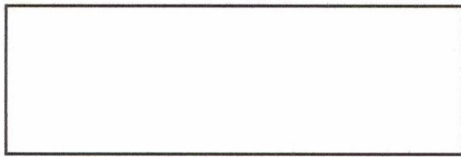

- A. function key
- B. The key reduction
- C. additional key
- D. Confirmation key

A      B      C      D

Instructions: Press function key A to cycle different functions, and press key B or C to modify its parameter value. Press the D key to confirm it.

### 1. The LCD keyboard plate operation instructions

order number	menu	Menu function	explain
1	Address 001	DMX512 Address code setting 001	Press upper and down keys to adjust the address code, press OK to save.
2	Channel 4CH	2 / 4 channel selection	Press the up and down keys to select the number of channels, and press OK to save.
3	Static	Manual color selection	Press up and down keys to adjust the select manual, press OK key to save.
4	Dim Mode DIM3	Tuning smoothness	Press up and down to select the smoothness, and press OK to save.
5	Back liḡe ON/OFF	Display the backlight settings	ON always bright, OFF no operation screen

6	White Balance	Light fixture power regulation	Non-professionals shall not change without authorization
7	Temp	Light temperature display	Confirm shows the current temperature of the lamp

## 2. DMX512 Channel description

### 2 channel

order number	function	explain
Channel 1	Color 1	(0-255) LED dimming, linear dimming, from dark to bright
Channel 2	Color 2	(0-255) LED dimming, linear dimming, from dark to bright

### 4 channel

order number	function	explain
Channel 1	Total dimming	0 Close the 1-255 dimming
Channel 2	Color 1	(0-255) LED dimming, linear dimming, from dark to bright
Channel 3	Color 2	(0-255) LED dimming, linear dimming, from dark to bright
Channel 4	strobe	(0-255) Adjust the strobe speed.

## 3. Support RDM device modification address code and number of channels vendor code 0xA88A

**No more than 4 sets in series**